 
HOW TO INSTALL YOUR SHOWER HEATER



1a. Wrap with teflon: Both ends of a ½" straight nipple (not included).



2. Screw one end of the nipple into the back of the heater.



4. Turn faucet on and allow the water run for 10 seconds, then attach the shower head.

 


DO NOT use any other shower head with this equipment.

CONGRATULATIONS INSTALLATION IS NOW COMPLETE!

Once the faucet is turned on, hot water will come out instantly.


Set the temperature by regulating the flow of water.



1b. Wrap with teflon: The threads on the heater output.



 3. Screw the heater onto the pipe, holding the heater cover firmly. Tighten the heater with an adjustable wrench.



5. Plug the heater to a receptacle* 3.5 feet away from the shower area. *30 amp electric circuit for exclusive use of the heater.

*30 amp electric circuit for exclusive use of the heater. **DO NOT USE EXTENSIONS.**

Warranty: 2 years in parts and labor. **Purchase receipt** is required.

It is recommended to use the original shower head. Restricting the water flow could damage your unit.

ASSEMBLED BY MAREY HEATER CORP. WITH US AND FOREIGN COMPONENTS.